



Open all profiles upwards

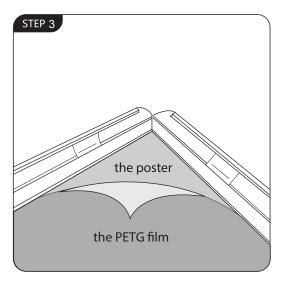

Put into the poster, then cover the PETG film

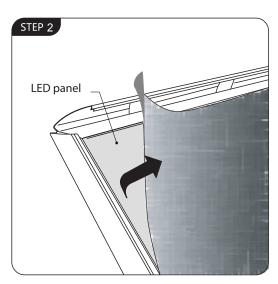

Take-off the anti-reflex cover



Close the profiles downwards

